

01DTOVPN1006SDFW-V2
10X6 OVERLAP PENT SHED.



BEFORE YOU START PLEASE READ THE INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the items listed in the parts list provided.
- When you are ready to start, make sure you have the right tools at hand (not supplied - see the equipment list on next page).
- Ensure there is plenty of space and a clean dry area for assembly.
- Ensure you have enough time to build the product to ensure the building is water tight.

LOCATION FOR YOUR GARDEN BUILDING

A minimum of 600mm should be left around the perimeter of your garden building to allow access for maintenance, annual treatment and to allow air flow around the building.

Where possible you should avoid placing your garden building underneath large trees to prevent the tree causing damage to the building.

BUILDING A BASE

When thinking about where the building and where the base is going to be constructed: Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent movement. Refer to the contents page for the base dimensions. The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.
- Wooden base - Levelled / on posts / ground screws.


TREATMENT

Once your garden building has been installed it will need to be treated within 14 days (weather permitting) and annually to prevent the timber from deteriorating and to waterproof it. This is required to maintain the anti-rot guarantee.

Dip Treated buildings - Require a preservative treatment to protect against rot and decay and a waterproof treatment to prevent water ingress
Pressure Treated buildings - Require a waterproof treatment to prevent water ingress
Log Cabins/Insulated Garden Rooms - Are supplied untreated and require a preservative and waterproofing treatment.


TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

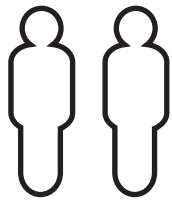

x2

All buildings should be erected by two adults

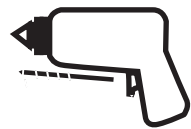

2mm Drill bit

For ease of assembly, you **MUST** pilot drill all screw holes and ensure all screw heads are countersunk.



For ease of assembly, you will need a tape measure to check dimensions of components and fixings.



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction



CAUTION

Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timber.

REGISTER FOR YOUR
10 YEAR
ANTI-ROT
GUARANTEE TODAY


In all instances for assistance with your product or to register your anti rot guarantee, please contact us via our customer portal




www.mgplogistics.co.uk

Mercia Garden Products Limited, Sutton On Trent, Newark, Nottinghamshire, NG23 6QN

Screws & Nails

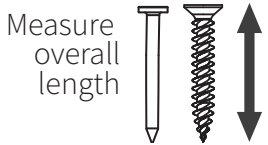

Bolts

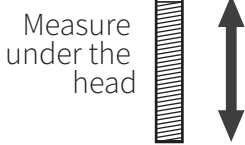

****Protim Aquatan T5 (621)****

Your building has been dip treated with Aquatan.

Aquatan is a water-based concentrate which is diluted with water, the building has been treated by the correct application of Aquatan solution and then allowed to dry.

Aquatan is a decorative finish to colour the wood, which is applied industrially to timber fence panels and garden buildings.

Aquatan undiluted contains: boric acid, sodium hydroxide 32% solution, aqueous mixture of sodium dioctyl sulphosuccinat and alcohols: 2, 4, 6-trichlorophenol.



TO DO LIST

- ☐ Find a suitable location to build *(see front cover for further information)*.
- ☐ Build a base *(see front cover for further information)*.
- ☐ Check the base is flat, level, clear of debris and has 60cm clearance on all sides.
- ☐ Check you have the required equipment / tools.
- ☐ Check you have all the product items listed *(if you have missing or damaged parts please scan the QR code below to visit our online customer portal)*.
- ☐ Install the product as per the step by step instructions within this pack.
- ☐ Prepare the product ready for treatment (this may include sanding).
- ☐ Apply a preserving and a waterproofing treatment within 14 days *(weather permitting)* of installation *(pressure treated products do not require a preserver)*.
- ☐ Register for your anti rot guarantee *(scan the QR below)*.
- ☐ Tidy the build area and dispose of any remaining parts responsibly.
- ☐ Maintain your building *(see the manufacturers recommendations at the back of this pack)*.

EQUIPMENT LIST

- ☐ Hammer
- ☐ Flat Head Screwdriver
- ☐ Drill
- ☐ Drill Bit Set
- ☐ Phillips and Slotted Bit Sets
- ☐ Tape Measure
- ☐ Hand Saw
- ☐ Spirit Level
- ☐ Ladders/Steps
- ☐ Stanley Knife/Cutting Tool
- ☐ Sand Paper
- ☐ Gloves
- ☐ Silicone (For Windows Only)
- ☐ Sealant Application Gun
- ☐ Wood Filler (Optional)
- ☐ Timber Preservative Treatment *(not pressure treated products)*
- ☐ Timber Water Proofing Treatment
- ☐ Treatment Mixing Stick
- ☐ Paint Brush/Sprayer/Roller

NEED EXTRA SUPPORT

If you are unsure that your base preparation will be suitable, please contact us via our customer portal to discuss this further.

Alternatively, you can visit our website or MGP Logistics Online Portal for some further sheducation.

Website:
<https://www.merciagardenproducts.co.uk/sheducation>

MGP Logistics Online Portal:
<https://www.mgplogistics.co.uk/>

Here you will find plenty of useful information that'll help with most pre-installation and maintenance queries.



ANY QUESTIONS?
Scan the QR code to contact us via our customer portal.

NOTES

ACCESSING VIDEO GUIDES...


Some steps within this set of instructions come with an added video guide for your convenience. These can be accessed via the QR code and used to aid you in constructing that step. See below for how to use.

You can also find all the videos on our youtube channel:
<https://www.youtube.com/@merciagardenproducts8716/videos>

1. Find the QR code within the instruction step...


Step.....

Parts Needed- No. QTY 1
No. QTY 1
No. QTY 1

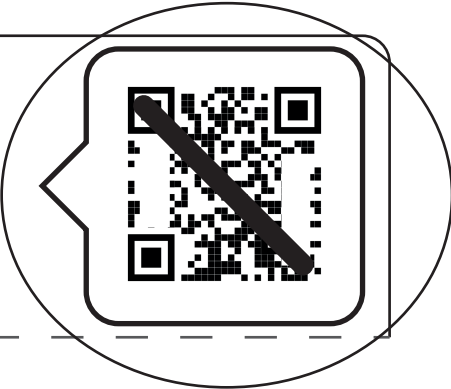

Within the instruction step, there will be an icon in the top right that has a QR code in. This is where the video can be accessed from.
Please note: not every step has a video guide.

2. Open camera app...

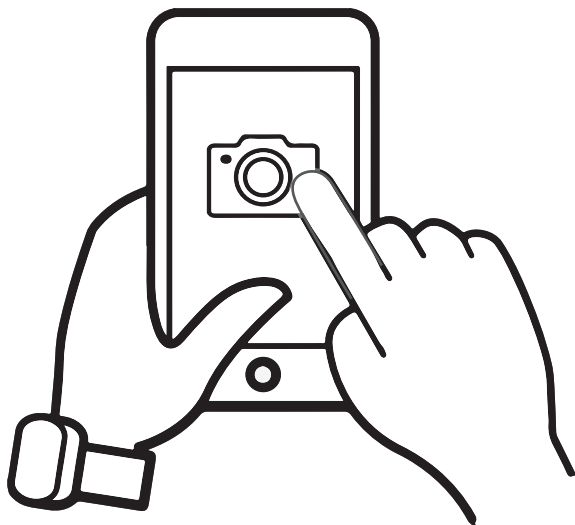

On your personal smart device (phone, tablet etc), open your camera app or QR code scanner app.


ACCESSING VIDEO GUIDES...

3. Scan QR code...



To scan the QR code, hold the camera over the QR code so that it can be seen on the screen. Once the QR code has been registered, follow the prompts on your device to open the video. (This will vary depending on your device.)
Please note: Ensure to use the back camera of your smart device as this will scan the QR code more accurately.

4. Watch the video...

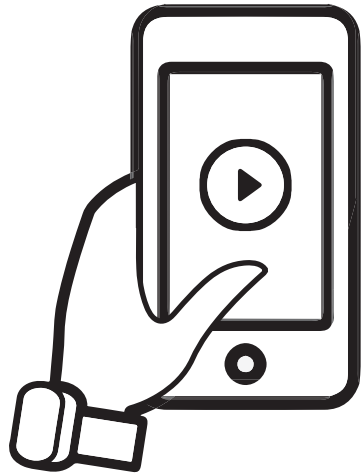


The video guide will now be displayed on your smart device.

Disclaimer: The garden building constructed in the video guides may be constructed differently to your building. Please ensure to read your instructions carefully to avoid error.

01D TO V P N 1006 S D F W - V 2

Overall Dimensions:
Width = 2974mm
Depth = 1891mm
Height = 2007mm

Base Dimensions:
Width = 2912mm
Depth = 1753mm

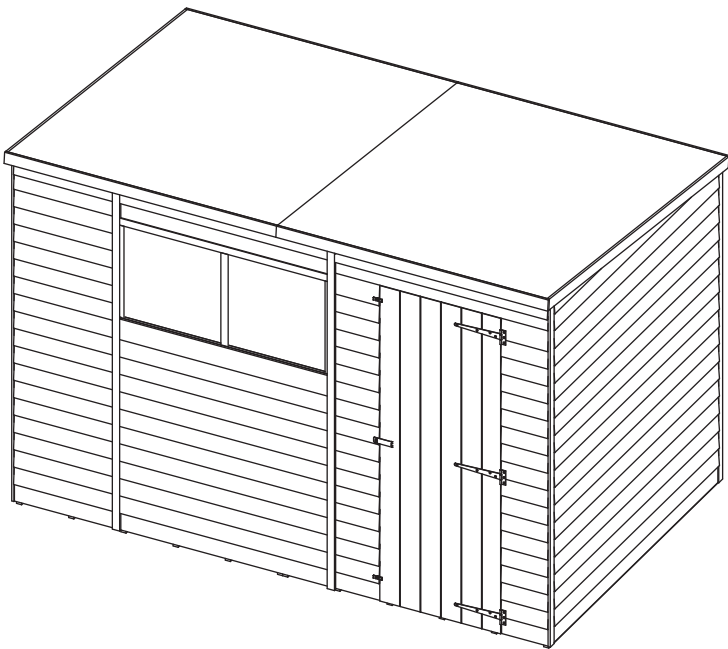


Contents:

Tip: Labelling your parts, using a pencil and masking tape, may help you to identify them easier when you need them.


NO.1 FLOOR PANEL

1

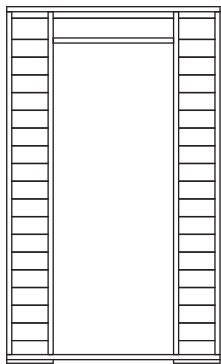


Door Panel QTY 1
AI-01R11OVSD1180X1972-V1

2

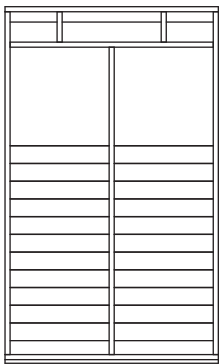


Window Panel QTY 1
AI-01R11OV2CW1180X1972-V1

3

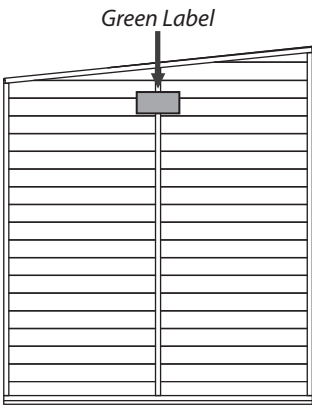


Right Gable QTY 1
AI-01R11OVLPGR1707X1980-V1

4

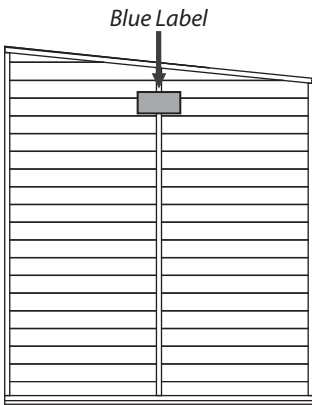


Left Gable QTY 1
AI-01R11OVLPLGL1707X1980-V1

5




Plain Panel 1 QTY 1
562x1799mm
AI-R11OVPP562X1799-V1

6

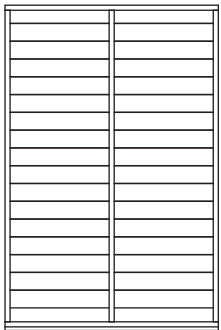


Plain Panel 2 QTY 2
1180x1799mm
AI-R11OVPP1180X1799-V1

7

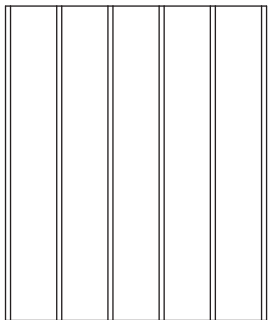


Floor QTY 2
AI-R11OSBF1753X1456-V1

8



Roof QTY 2
PI-03-0381

9

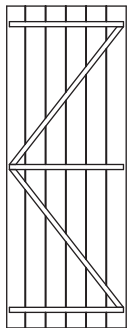


Door QTY 1
AI-R11FBMBZBD661X1780-V1

10




Plain Panel 3 QTY 1
562x1972mm
AI-R11OVPP562X1972-V1

11



Ridge Bar - 27x44x1712mm QTY 3
F2744-1712mm

12



Door Block - 28x28x150mm QTY 1
F2828-150mm

13



Eaves Framing - 28x28x1475mm QTY 4
F2828-1475mm

14




Window Strips - 12x28x580mm QTY 4
S1228-580mm

15



Window Cover Trims - 12x40x518mm QTY 3
S1240-518mm

16



Window Cover Trim - 12x40x1180mm QTY 1
S1240-1180mm

17



Back Cover Trims - 12x40x1798mm QTY 4
S1240-1798mm

18




Front Cover Trims - 12x40x1970mm QTY 4
S1240-1970mm

19




Fascias - 12x60x1487mm QTY 4
S1260-1487mm

- 20




End View

Fascias - 12x60x1870mm QTY 2
S1260-1870mm
- 21



End View

Door Beading Strip - 12x28x1720mm QTY 2
S1228-1720mm
- 22

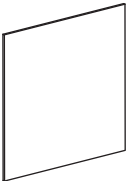

Styrene QTY 2
PI-05-0114
- 23



Window Cill QTY 1
PI-08-0013
- 24




Turn Button QTY 2
PI-07-0034
- 25



Hasp and Staple QTY 1
PI-07-0207
- 26



Felt QTY 1
- 27



T-Hinge QTY 3
PI-07-0021

Nail Bag

There may be extra screws present in the nail bag

- 

60mm Screw x 6
- 

30mm Screw x 148
- 

50mm Screw x 36
- 

20mm Screw x 3
- 

40mm Screw x 28
- 




Felt Tacks x 130

Pre Assembly

Before assembling remove the transportation blocks from the bottom of each panel.

Take care removing the blocks as to not damage the panels. Tap with a flat headed screwdriver and hammer.

Dispose of the blocks once removed.

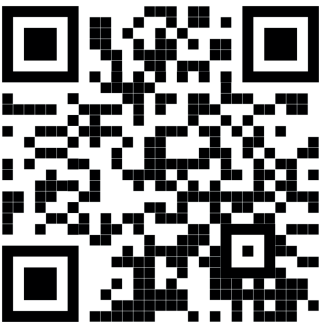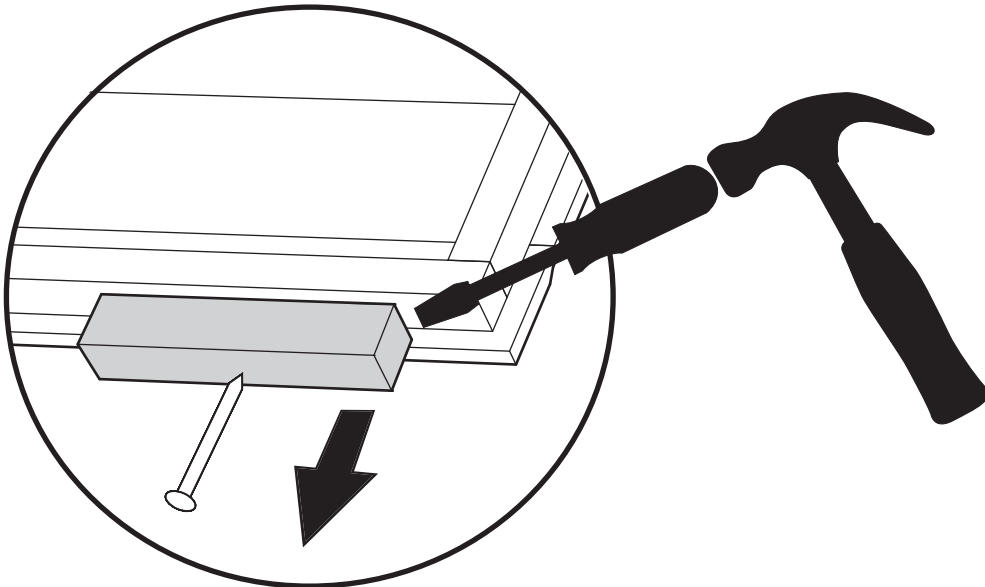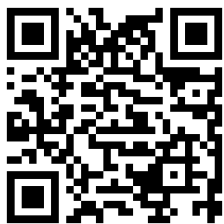

Missing parts?

Scan the QR code to visit our customer portal where you can quickly raise any missing or damaged parts and get a replacement sent out ASAP.




Before assembly, please make sure you have a suitable base ready to install your building onto.

Step 1
Parts Needed - No. 7 QTY 2


Place your Floors (No. 7) on a flat and level base with the bearers facing up. Push the panels flush together, as shown.

Secure the Floors (No. 7) together using 10x50mm screws in an alternating pattern.

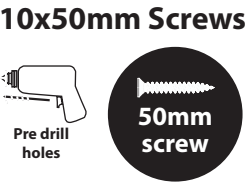


Step 2

Flip the assembled floors (No. 7) and place onto your firm and level base, ensure the base has suitable drainage free from areas where standing water can collect. See the front page for base requirements.

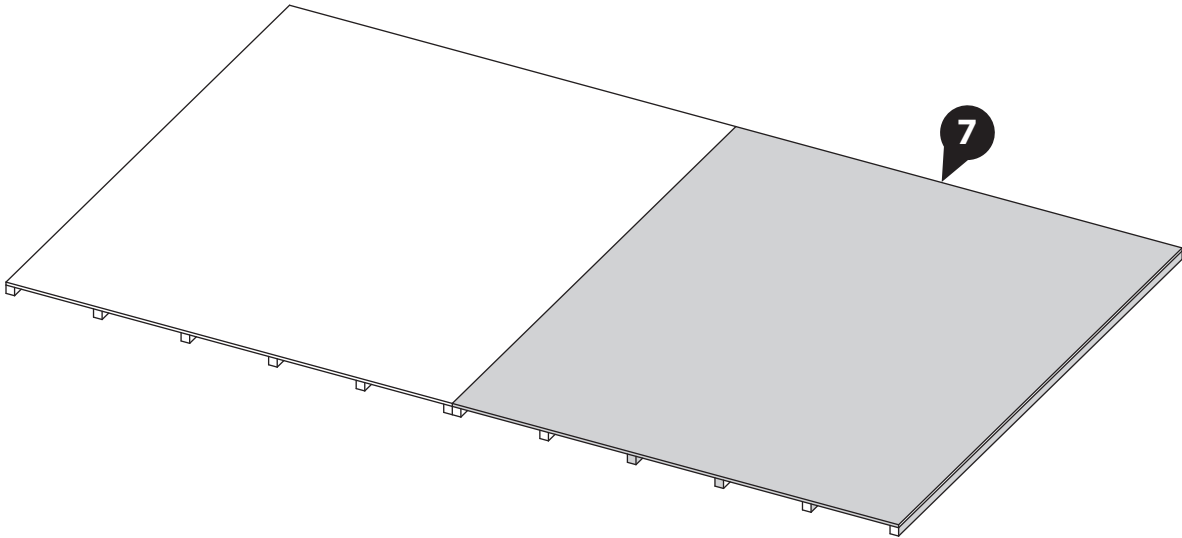

IMPORTANT: Pre-drill before fixing screws.

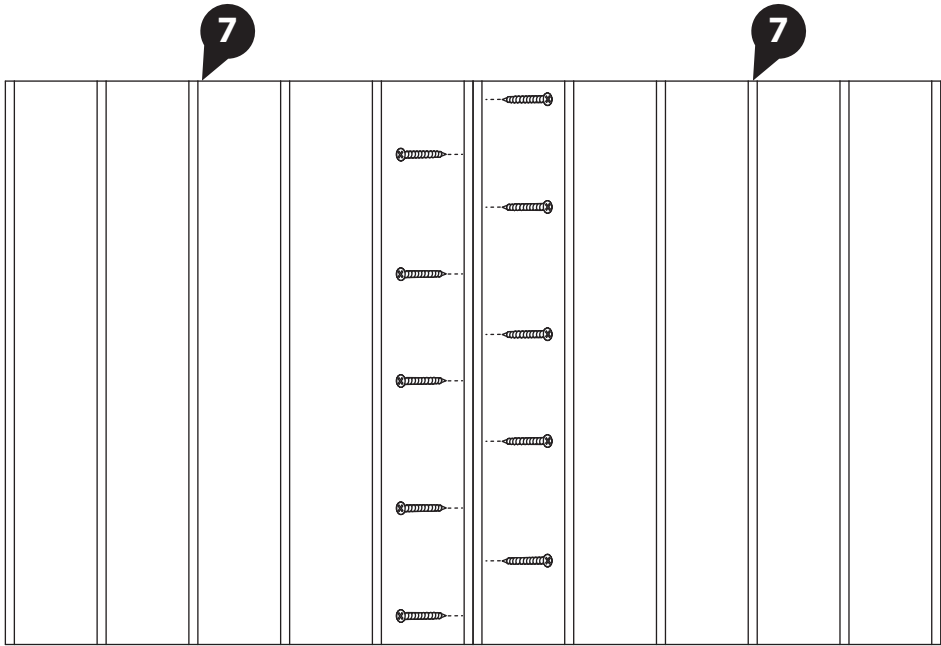

IMPORTANT: Pre-drill before fixing screws.

Step 3
Parts needed - No. 1 QTY 1
No. 9 QTY 1
No. 27 QTY 3


Place the door (No. 9) within the Door Panel (No. 1). Fix the T-Hinges (No. 27) onto the door and Door Panel using 7x30mm screws per Hinge, as shown (taking into account on which side of the Door Panel opening you want the Door to open). Ensure that the screws go through the cladding and into the framing behind.

21x30mm Screws




****PLEASE NOTE**** Before fitting the hinges, ensure the door is in the correct position depending on which side you want the door to open. See external illustrations below which show the doors internal framing.


IMPORTANT: Pre-drill before fixing screws.

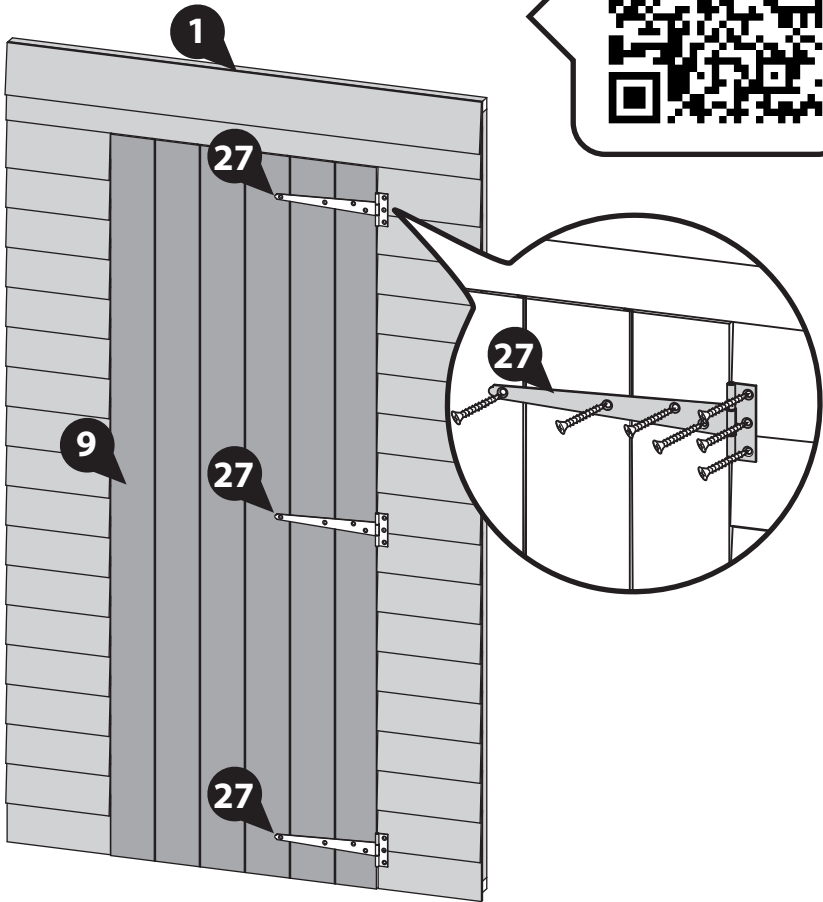

Opens from the Left

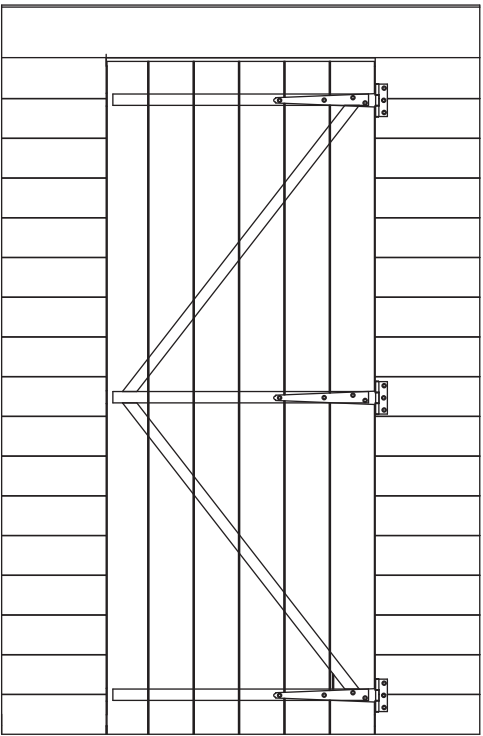

Opens from the Right

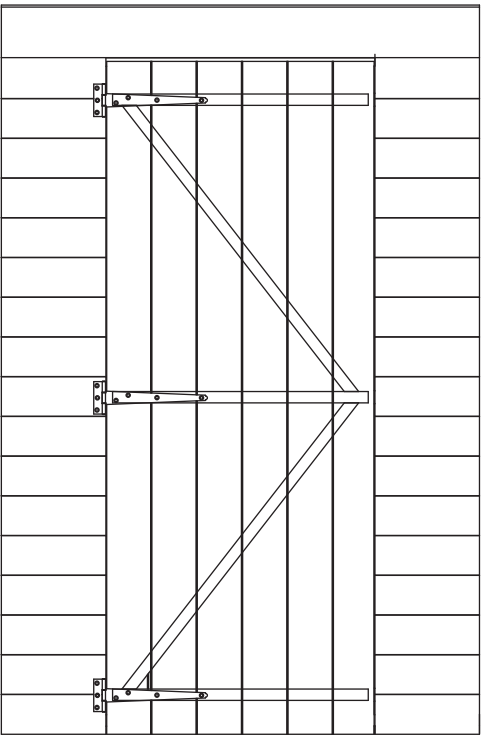

Step 4

Parts Needed - No. 4 QTY 1
No. 5 QTY 1
No. 10 QTY 1

****Please note: the back panels are interchangeable with each other, and can be positioned on either side of the building. Decide which works best before assembly****


Place the Left Gable (No. 4) and the Plain Panel 1 (No. 5) on top of the floor. Secure the Panels together at the corner using 3x50mm screws.

Place one Plain Panel 3 (No. 10) on top of the floor next to the Gable to create a corner, fix together using 3x50mm screws.

Position the panels so there is equal spacing between the floor and cladding

Do not secure the building to the floor until the roof has been fitted.

6x50mm Screws

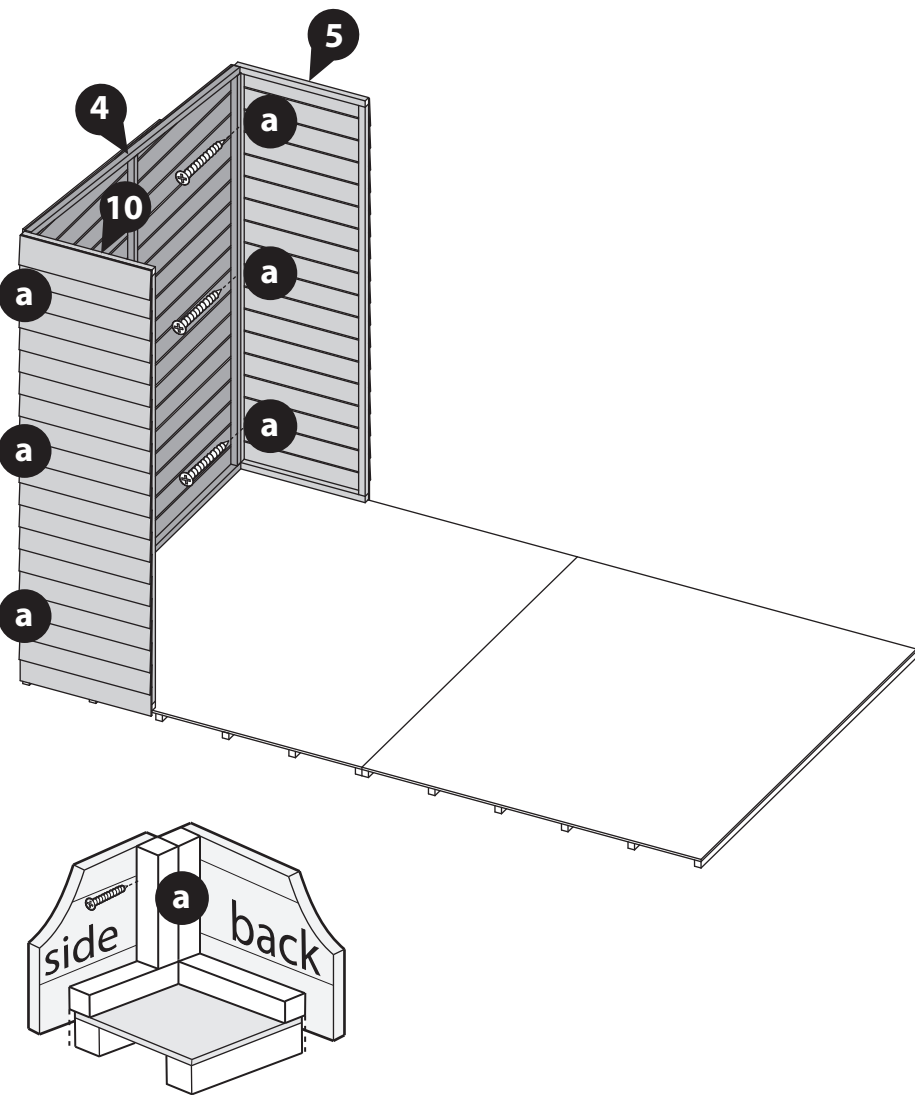

Step 5

Parts Needed - No. 6 QTY 2


Place a Plain Panel 2 (No. 6) next to the Plain panel 1 and fix together using 3x50mm screws in an alternating pattern.

Place a second Plain Panel 2 (No. 6) next to the previously fitted one and fix together using 3x50mm screws in an alternating pattern.

Position the panels so there is equal spacing between the floor and cladding

Do not secure the building to the floor until the roof has been fitted.

6x50mm Screws

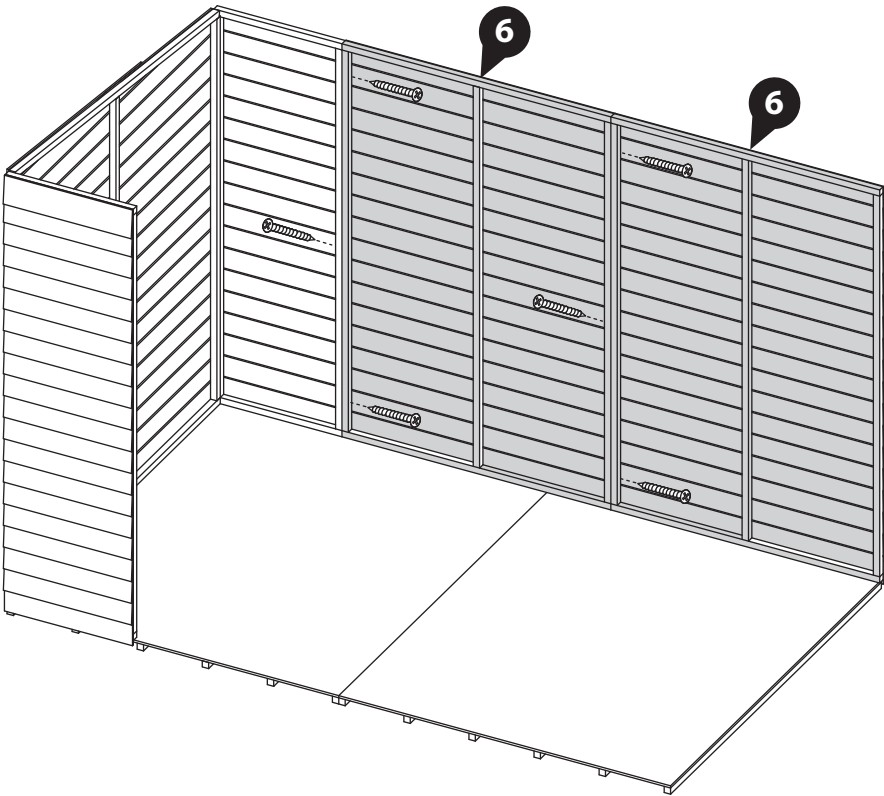

Step 6

Parts Needed - No. 2 QTY 1
No. 3 QTY 1

****Please note: the front panels are interchangeable with each other. Decide which works best before assembly****


Place the Window Panel (No. 2) next to Plain Panel 3 (No. 10) and secure together using 3x50mm screws in an alternating pattern.

Place the Right Gable (No. 3) on top of the floor next to the Plain Panel 2 (No. 6) to create the corner, secure together using 3x50mm screws at the corner.

Position the panels so there is equal spacing between the floor and cladding

Do not secure the building to the floor until the roof has been fitted.

6x50mm Screws

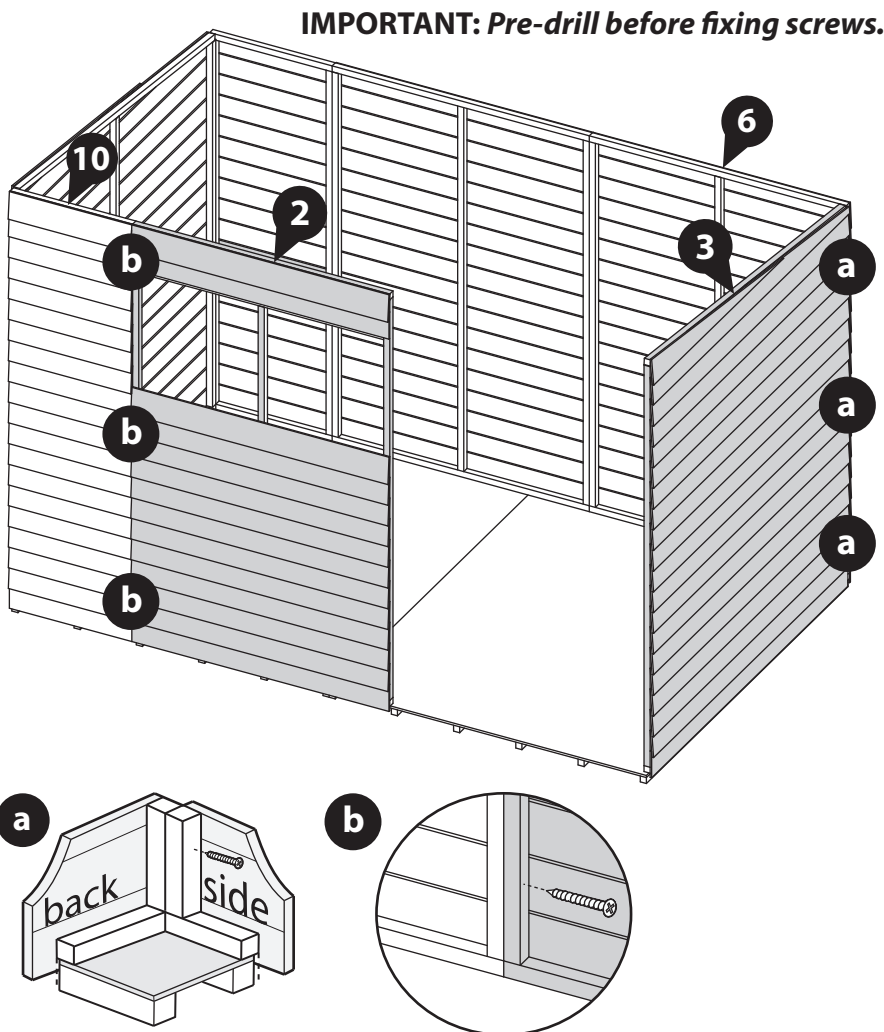

Step 7

Parts Needed - No. 1 QTY 1

Place the Door panel (**No. 1**) on top of the floor and fix at the corner using 3x50mm screws.

Fix the Door panel to the Window panel using 3x50mm screws in an alternating pattern.



Position the panels so there is equal spacing between the floor and cladding

Do not secure the building to the floor until the roof has been fitted.

6x50mm Screws



50mm screw

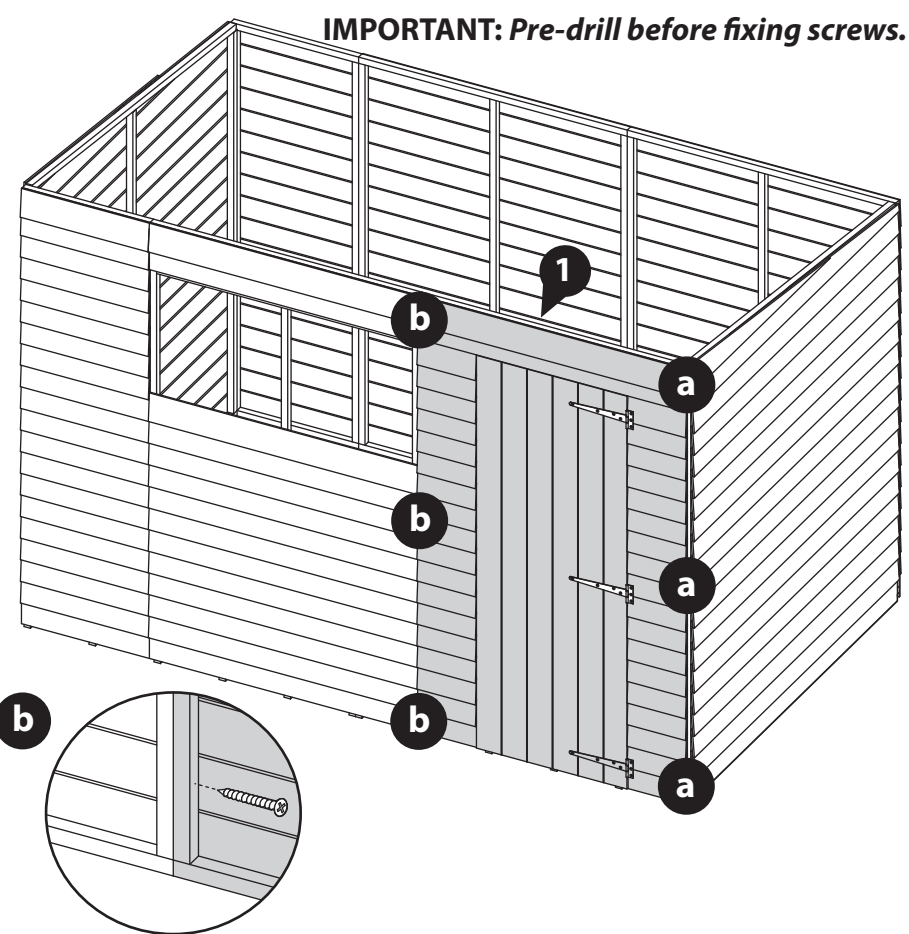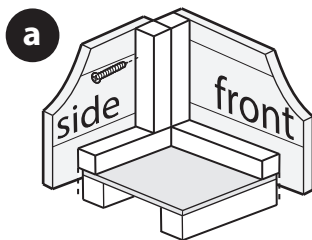

IMPORTANT: Pre-drill before fixing screws.

Step 8

Parts needed - No. 11 QTY 3

Position the ridge bars (**No. 11**) between the front and back of the building, align the middle ridge bar central to the building.


Fix in place using 2x60mm screws per Ridge bar, screwing through the external panel cladding/framing into the ridge bar.

***Ensure the ridge bar is flush with the top of the panel framing and the gable tops.**

6x60mm Screws



60mm screw

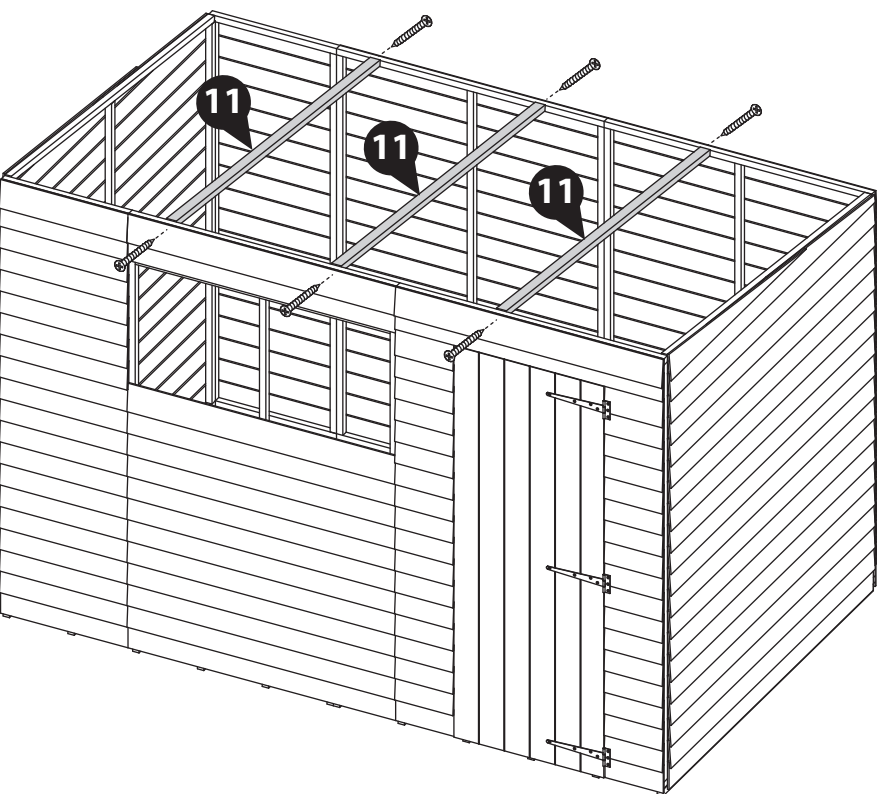

IMPORTANT: Pre-drill before fixing screws.

Step 9

Parts Needed - No. 8 QTY 2
No. 13 QTY 4


Fix the Eaves framing (**No. 13**) to the roof sheets (**No. 8**) using 4x30mm screws per eaves frame.

The framing should finish flush with the edge of the roof sheet

16x30mm Screws



30mm screw

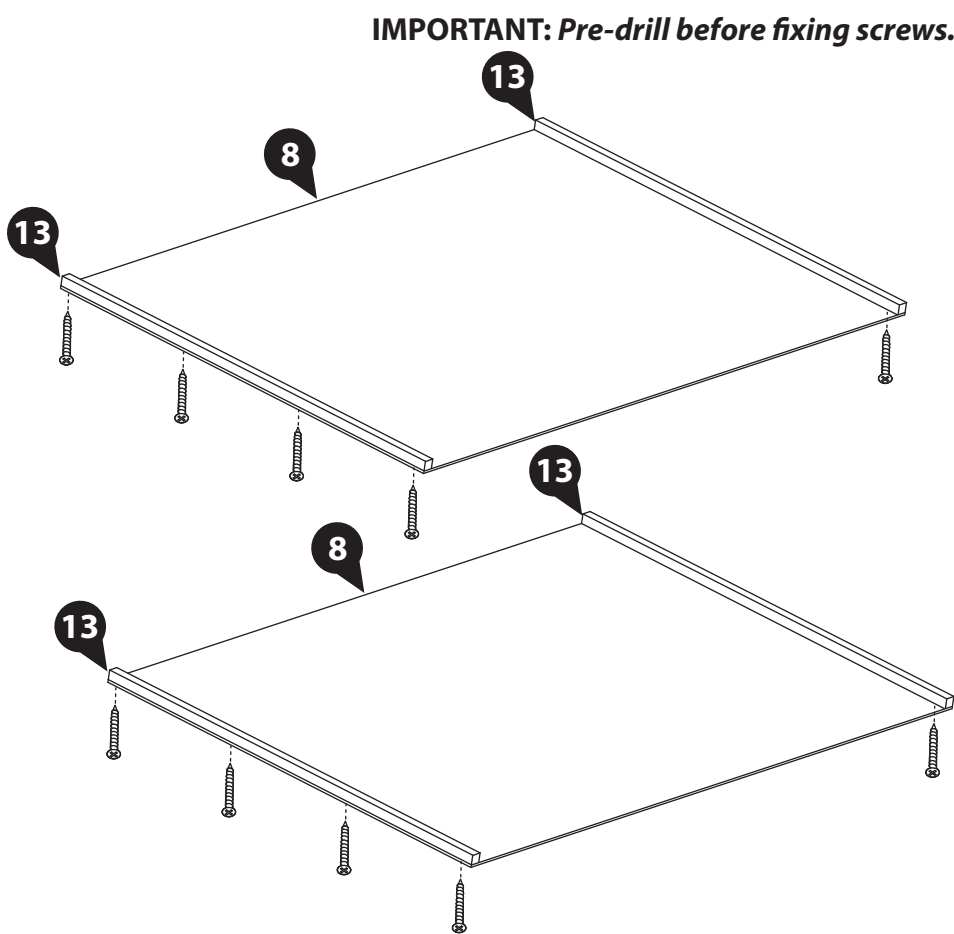

IMPORTANT: Pre-drill before fixing screws.

Step 10

Parts Needed - No. 8 QTY 2


Position the roof panels onto the top of the building, ensuring the roof is flush to the gable ends and that there is equal spacing at the front and back of the building.

Secure in place using 14x30mm screws per roof, screwing down through the sheet into the panel framing and ridge bars below.

28x30mm Screws



30mm screw


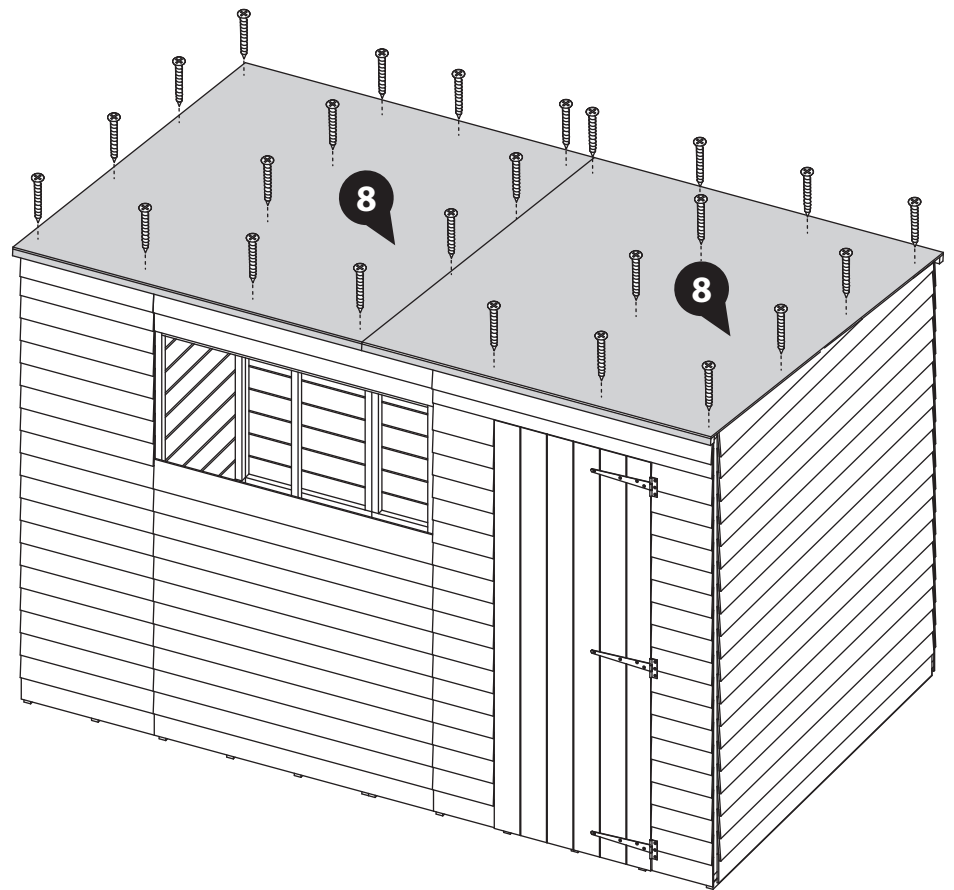


IMPORTANT: Pre-drill before fixing screws.

Step 11

Fix the building to the floor using 28x40mm screws, ensuring to go through the panel framing and into the floor bearers below.

28x40mm Screws

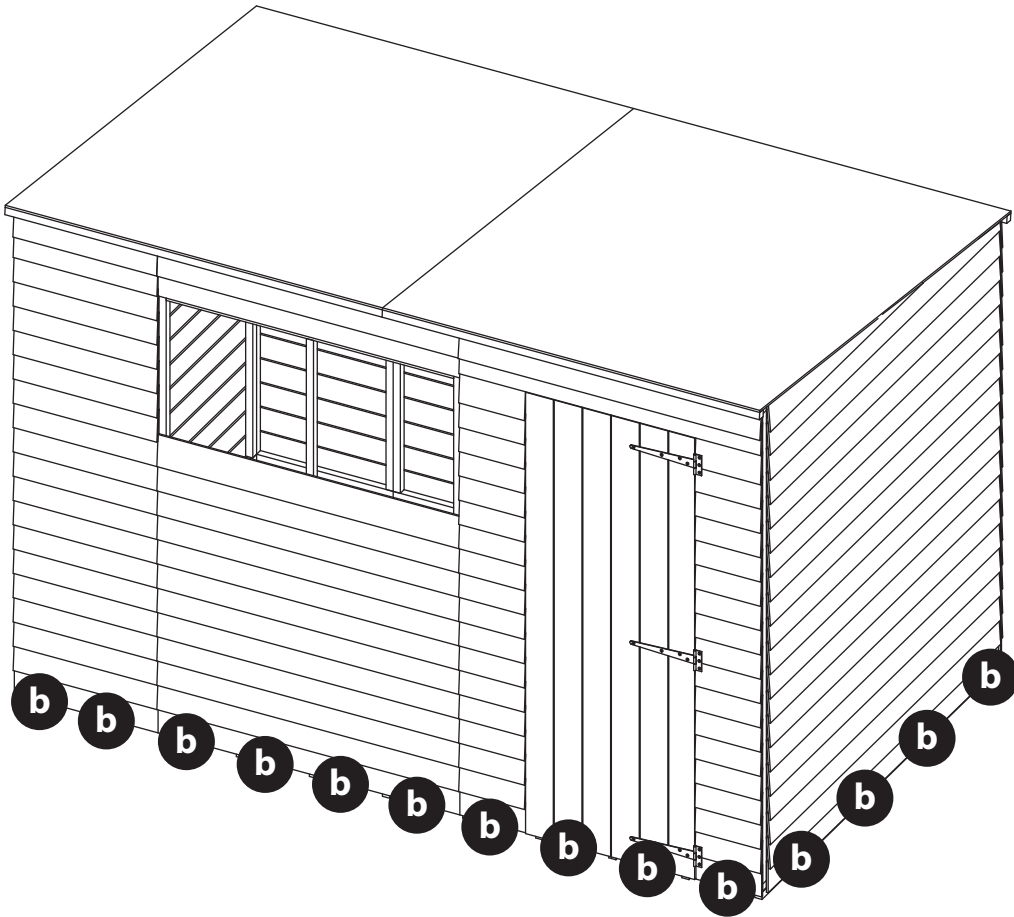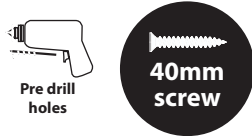

IMPORTANT: Pre-drill before fixing screws.

Step 12






Parts Needed - No. 26 QTY 1

Cut the felt (No. 26) into 2 sheets measuring 3050mm (L) x 1000mm (W).

Lay the sheets onto roof in the order shown in the diagram. Ensure there is a 50mm overhang around each side and that each sheets overlaps by at least 100mm

Fix in place using felt tacks at 100mm intervals.

130 x Felt tacks

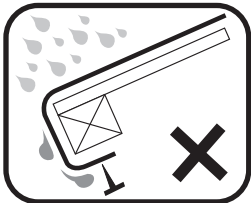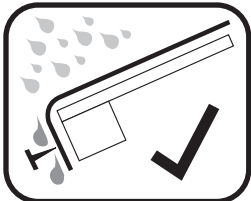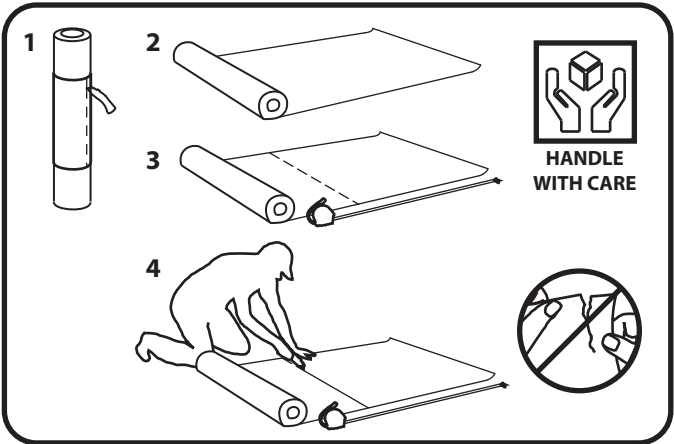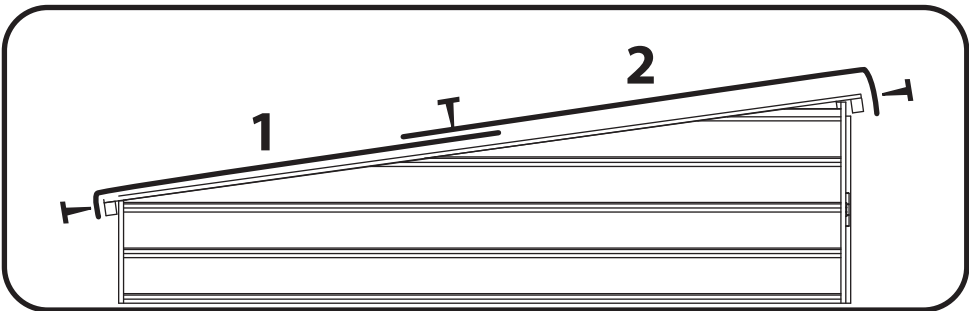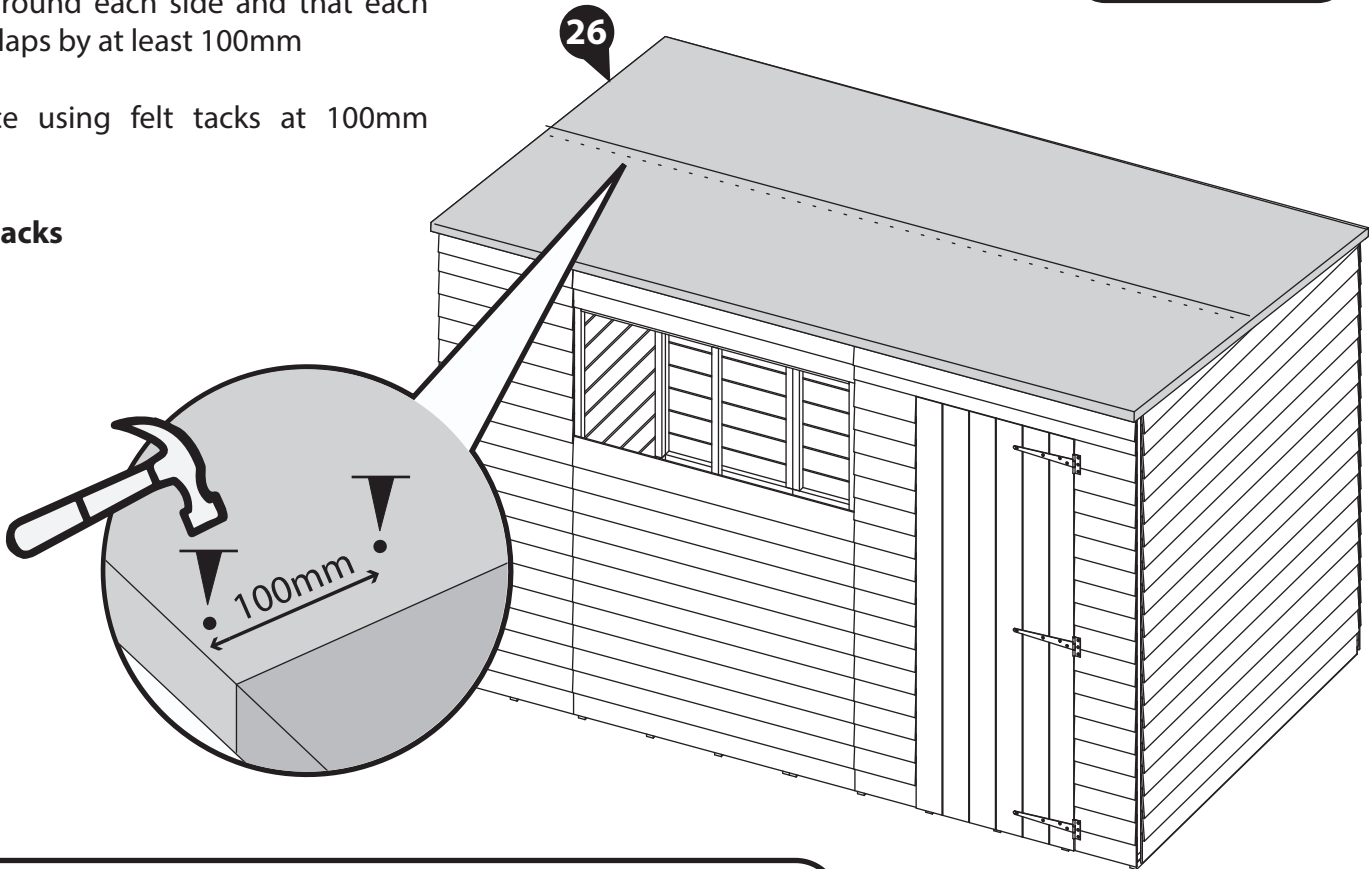

Step 13

Parts Needed - No. 14 QTY 4
No. 15 QTY 3
No. 16 QTY 1
No. 22 QTY 2
No. 23 QTY 1


- a** Fix 4x Window strips (No. 14) to the framing along the outside edge of the window gap using 3x30mm screws per strip.
- b** Place the Plastic cill (No. 23) into the window panel as shown in the illustration. Fix to framing using 3x20mm screws
- c** Fit the Styrene sheets (No. 22) on top of the window cill.

**For added weather protection fit your windows using silicone sealant around the outside edges.*


***When positioning the styrene sheets ensure there is an equal distance on all sides.*

- d** Attach the 4x Window Cover trims (No. 15 & 16) to either side of the windows and the centre. Secure into place using 3x30mm screws per strip.

24x30mm Screws
3x20mm Screws

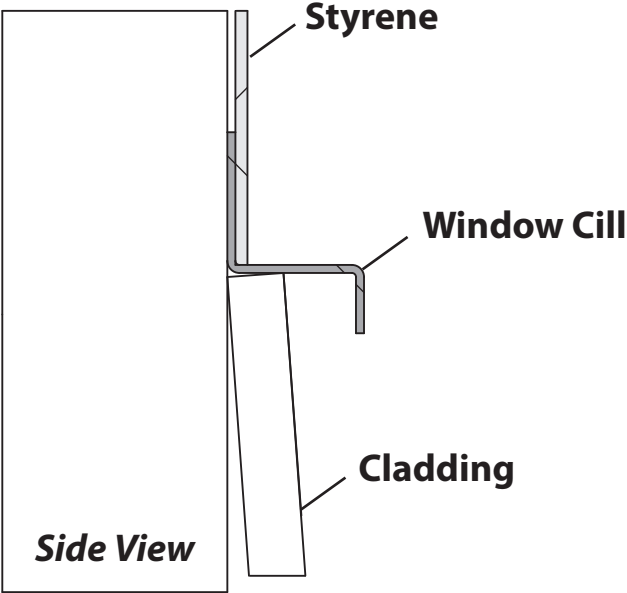

IMPORTANT: Pre-drill before fixing screws.

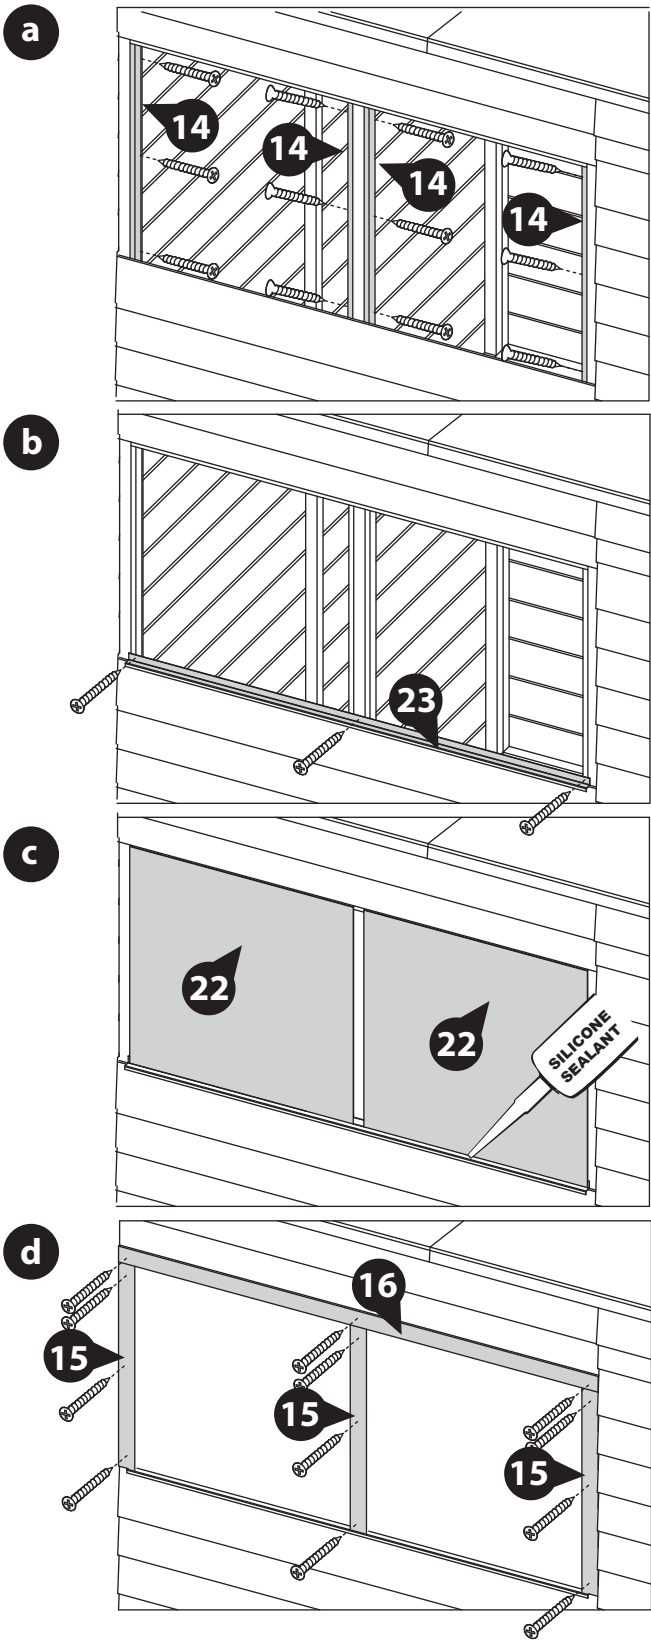


Step 14

Parts Needed - No. 17 QTY 4
No. 18 QTY 4

Place the cover trims (No. 17) to the corners and the joins at the back of the building and (No. 18) to the front, as shown.

Secure using 3x30mm for each cover trim.

24x30mm Screws

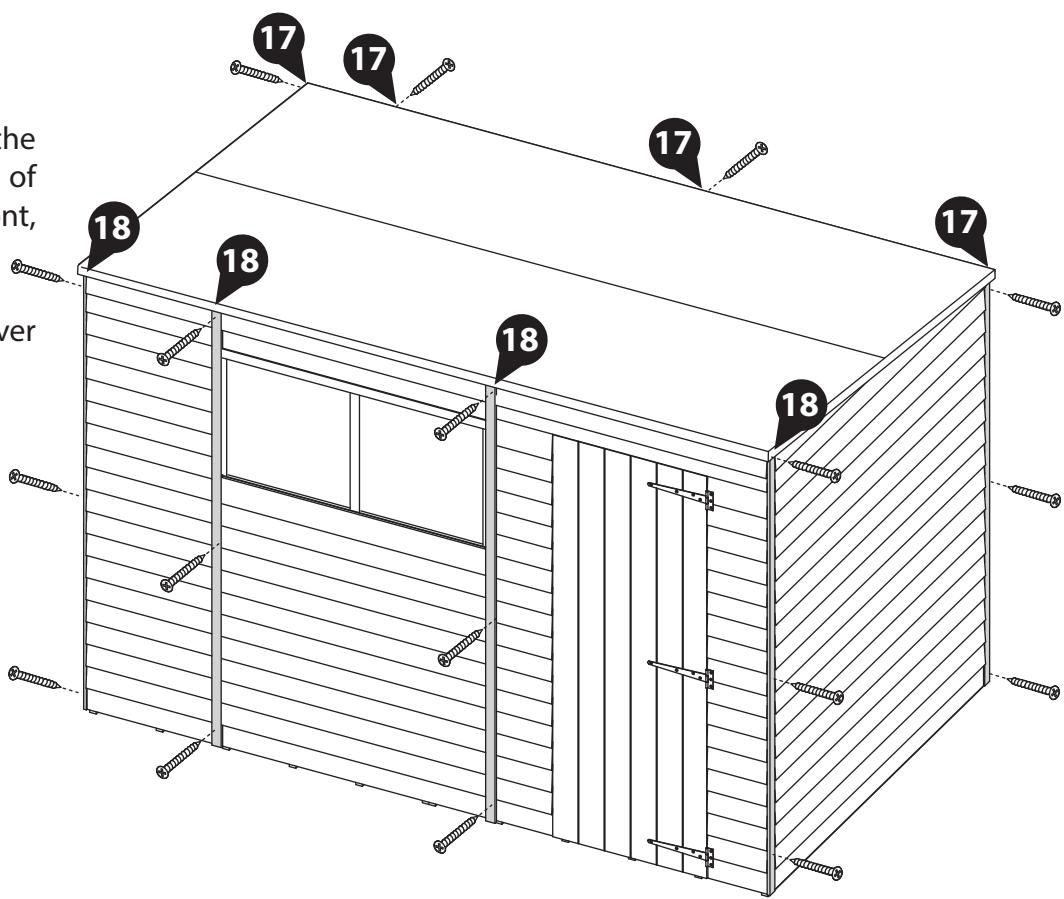

IMPORTANT: Pre-drill before fixing screws.



Step 15

Parts Needed - No. 19 QTY 4
No. 20 QTY 2

Position the Fascias (No. 19) to the back of the building and Fascias (No. 20) to each side and front of the building, ensuring to trap the Felt.

Secure using 3x30mm screws per fascia.

18x30mm Screws

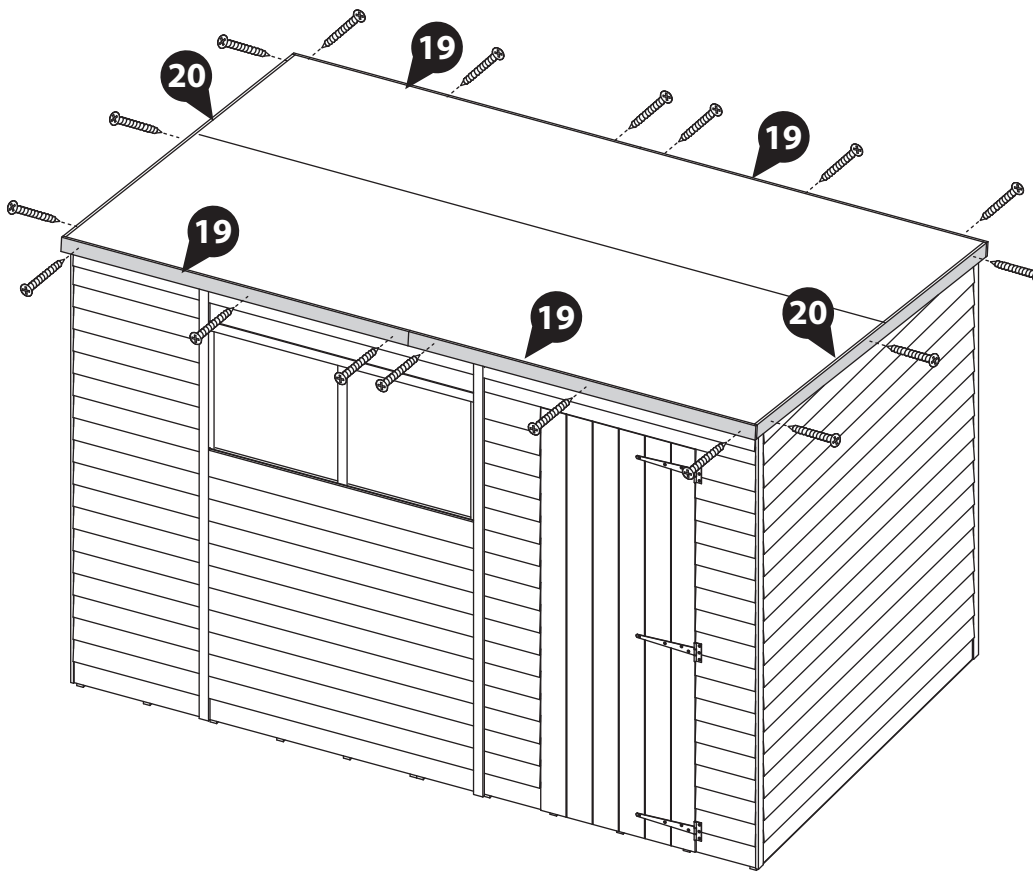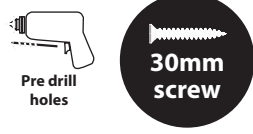

IMPORTANT: Pre-drill before fixing screws.


Step 16

Parts Needed - No. 12 QTY 1
No. 21 QTY 2


Locate the Door Beading strips (No. 21) onto the door panel framing, secure using 4x30mm screws per strip.

Fix the door block (No. 12) onto the door framing using 2x50mm Screws

2x50mm Screws
8x30mm Screws

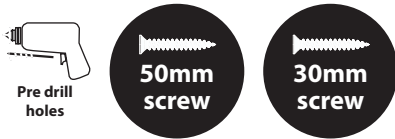

IMPORTANT: Pre-drill before fixing screws.

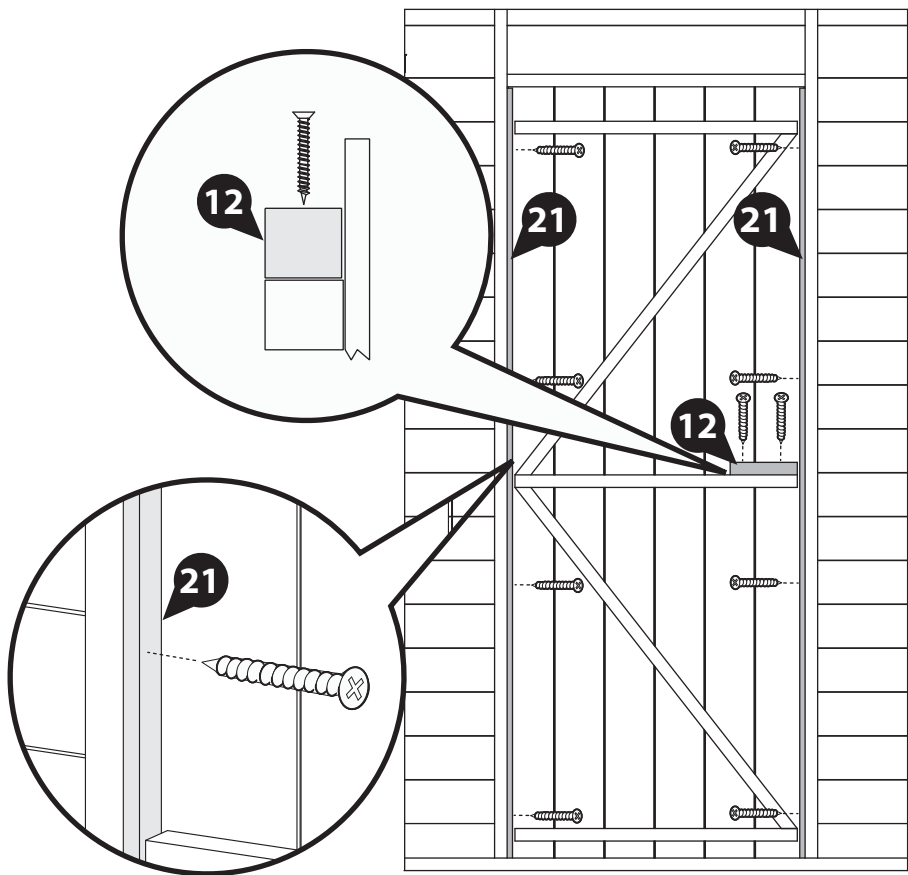


Step 17

Parts Needed - No. 24 QTY 2
No. 25 QTY 1


Locate the Turn Buttons (No. 24) to the top and bottom of the door panel, ensuring that the turn buttons catch the door. Secure using 1x30mm screw per turn button.

Locate the Hasp and Staple (No. 25) onto the door and door panel, secure using 7x30mm screws, ensuring the screws go through the cladding into the framing behind.

9x30mm Screws

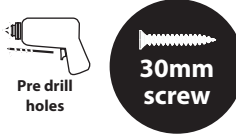

IMPORTANT: Pre-drill before fixing screws.


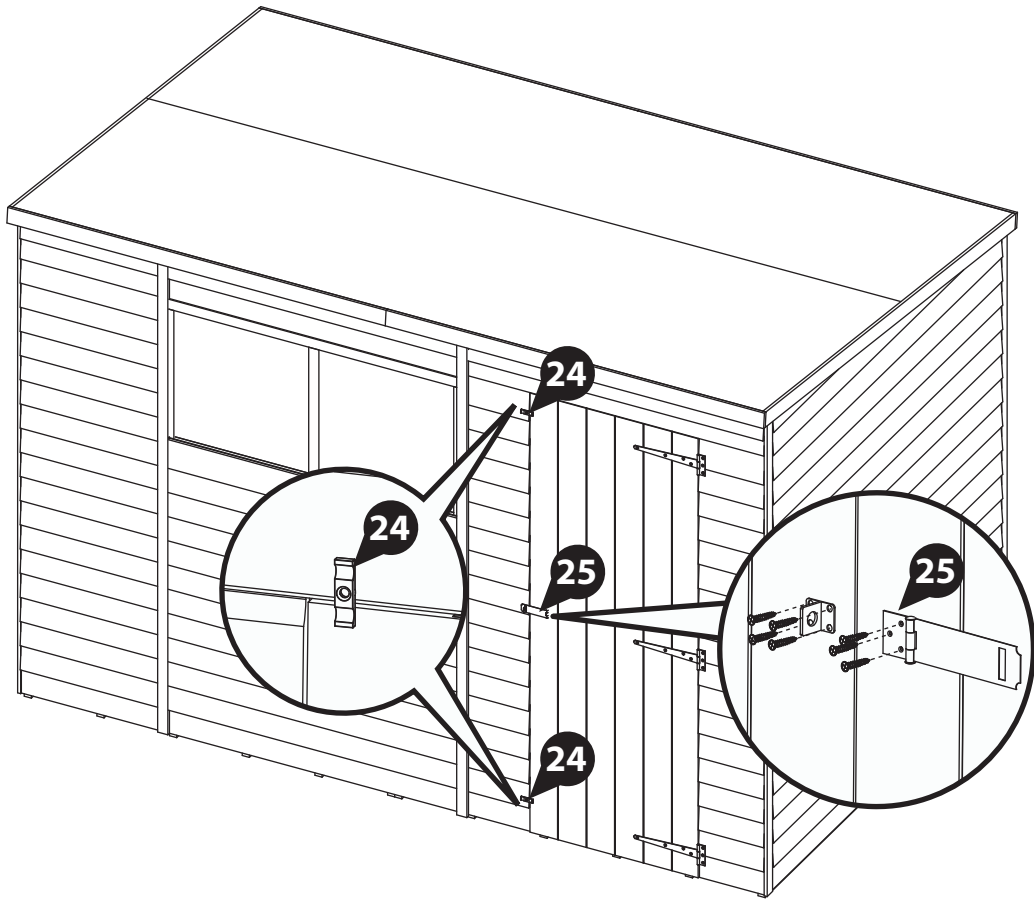


Step 18

Once constructed, apply a preserving treatment and a waterproofing treatment to your garden building as soon as possible. This will help to protect your building and prevent decay.

See page 12 for a full guide and instructions.

Once fully treated, score around the protective covers on the glazing and carefully peel the coverings back.

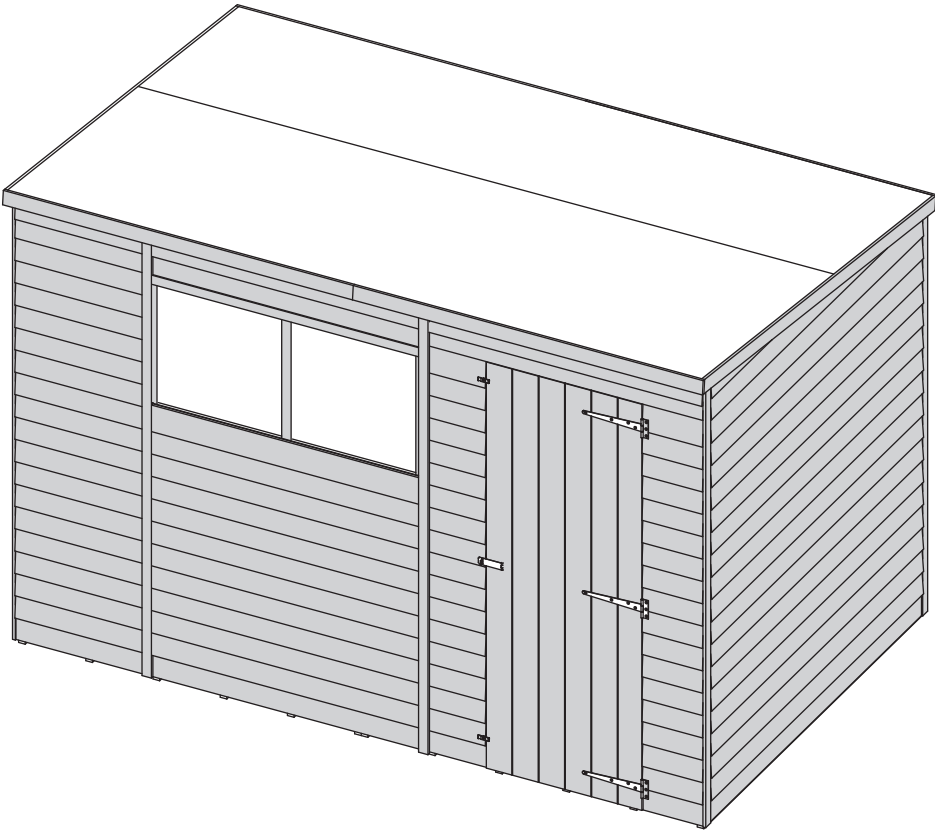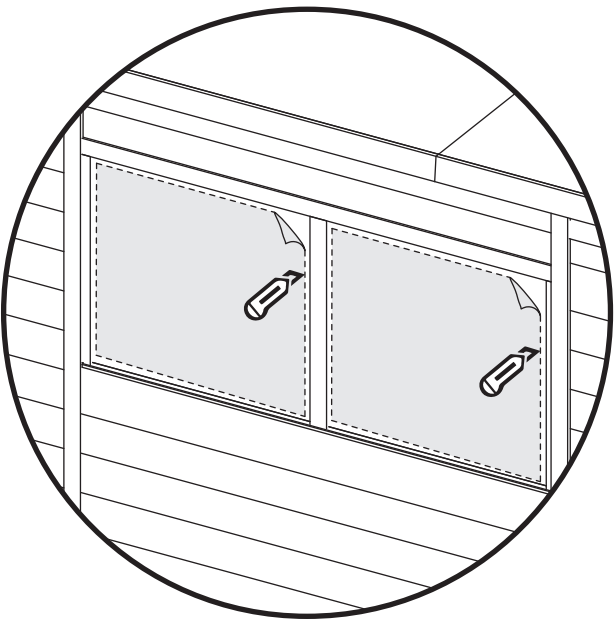

LEAVE US A REVIEW...



Want to share your experience with us?
Leave us a review on TrustPilot or Google.

Your reviews help other people find and trust our business, as well as helping to play an important role in our growth and improvement!

TREATING YOUR GARDEN BUILDING

Preservation of wood that's outdoors is vital. A little early care will help protect your garden building, improve its appearance and ensure maximum longevity. Insects, moisture, salt, and changing weather can have dramatic effects on the stability and appearance of your garden building. Once your building is installed, you've checked it over and you're happy with it, you can take a few basic precautions to prepare it for the elements. Treating your garden building helps prevent decay and, by repelling water, discourages the growth of moulds and fungi that could jeopardise the structural integrity of the wood.

Dip Treated buildings - Require a preservative treatment to protect against rot and decay and a waterproof treatment to prevent water ingress
Pressure Treated buildings - Require a waterproof treatment to prevent water ingress
Log Cabins/Insulated Garden Rooms - Are supplied untreated and require a preservative and waterproofing treatment.



ANY QUESTIONS?
Scan the QR code to contact us via our customer portal.

To apply a preservative and water proofing treatment (pressure treated products do not require a preserver), follow the manufacturer's instructions but in principle, stick to the following steps:

- ✓ Weather permitting, ensure to treat your garden building within 14 days of installation.
- ✓ Wear latex or rubber gloves, eye protection and (if spraying) a mask.
- ✓ Prepare the wood, by sanding down any ridges or inconsistencies in the wood, smoothing out knots and end-cuts.
- ✓ Choose a dry day to treat your garden building. If you're spraying rather than brushing paint on, avoid a windy day.
- ✓ Be sure you can safely reach all the sections you need to paint - and if you need a ladder, make sure it's safely positioned before climbing. Lay dust sheets around to avoid paint splatters on your base or surrounding plants.
- ✓ Tape around windowpanes to avoid smears when you're painting the frames.
- ✓ Keep pets and small children out of the way. The last thing you want is to have fur on your garden building paint, or little painted footprints all over your garden and home.
- ✓ Fill any gaps in the building's body with caulk or wood filler to prevent water and draughts getting in. Silicone based caulk is flexible and will move with the timber when temperature and humidity change. Allow to dry completely before treating. A handy tip for finding gaps is to go into your garden building and look for light leaking through joins and frames. If light gets in, then so will water.
- ✓ Liberally apply at least two coats of the treatment products with a brush or spray, taking care to allow the first coat to completely dry before applying the second.
- ✓ Make sure the solution permeates the whole of the surface area, especially around natural cracks, end cuts and nail/screw holes.



APPLY WOOD TREATMENT
IMMEDIATELY
AFTER ASSEMBLY



- 1

Perimeter

Check around the perimeter of your product to ensure there are not trees or plants that are in contact with or overhanging the building. This can affect airflow and overhanging trees, or branches can damage the roof, it is advised to keep plants at a distance.
- 2

Repair

Inspect the interior and exterior of the product to look for splits, cracks, and holes. Although this is a natural occurrence it can be prevented. A wood filler can be used to close the splits, cracks, and holes.
- 3

Roof

Check your roof regularly for tears, splits, damaged wood and fallen debris. If you notice any of this immediate repair is critical.
- 4

Doors & Windows

Expansion and contraction can cause doors and windows to stick or become difficult to open. Small adjustments to the hinge position can be made to the doors and windows to allow free movement.
- 5

Oil

Hinges can seize up over time, apply lubricant to the hinges and locks annually.
- 6

Screws & Bolts

It is advised to check all screws and bolts and tighten any loose you might find. For log cabins specifically the storm braces will require loosening. During humidity and temperature changes (seasons) to allow expansion and contraction to prevent gaping, twisting, popping, and warping.
- 7

Wash

At least once a year, give the outside of you building a good wash, to remove cobwebs, leaves, or any other dirt that may accumulate on the exterior.

- 8

Airing

Airing your product regularly prevents the build up of condensation which can cause the timber to warp, bow, boards to pop, distortion, rot and mould. Condensation can build up over time or daily, it is caused by a rise and fall in temperature.

Excessive moisture levels within your building can cause water to collect on the roofs, walls and floors internally. Leaving doors and windows open regularly can help combat the natural moisture build up.
- 9

Clean & Tidy

It is good practice to clean the inside and outside of your product regularly. Clear out the contents, sweep the floor, remove dirt and cobwebs. Check for areas of damp and investigate the cause to remove and prevent future occurrences. Check the ground around your product for build up of debris such as leaves, remove and ensure there is clear ventilation underneath the floor.

Additional Playhouse Maintenance:
It is recommended that the following checks and maintenance are carried out at the beginning of each season as well as at regular intervals during the usage season.

- Check all nuts /bolts/ screws for tightness and tighten when required.
- Check for movement / opening of wood giving rise to protrusion of nail heads and tips.
- Check hinges.
- Replace defective parts in accordance with the manufacturers instructions.
- Check any crossbeams, suspensions and anchors.
- If a swing is included; check the swing seat, chains and ropes.

IF THESE CHECKS ARE NOT CARRIED OUT THE ACTIVITY TOY COULD BECOME A HAZARD

All our garden buildings have been designed and manufactured with care and attention to be the perfect addition to your outdoor space. To ensure you do get the best out of your new garden building and to increase the longevity we advise that you follow the product instructions and our manufacturer’s recommendations as detailed below. Thank you for choosing a Mercia Garden product!

1 Choosing the most suitable location for your garden building...

A minimum of 60cm should be left around the perimeter of your garden building to allow access for maintenance, annual treatment and to allow air flow around the building.

Where possible you should avoid placing your garden building underneath large trees to prevent the tree causing damage to the building.

2 Preparing the base for your garden building...

All our buildings must be built on a firm, level base to ensure the longevity of the building and prevent the wood from distorting. We recommend either concrete, concrete slabs or a wooden base, such as our ‘Portabase’.

The base should be slightly smaller than the external measurement of the building, i.e. the cladding should overlap the base, creating a run off for water and preventing water from pooling underneath the building.

We also recommend that the floor of the garden building is a minimum of 25mm above the surrounding ground level to avoid flooding.

3 After installation...

Once your garden building has been installed, it will need to be treated within 14 days (weather permitting) and annually to prevent the timber from deteriorating and to waterproof it. This is required to maintain the anti-rot guarantee.

Dip Treated buildings - Require a preservative treatment to protect against rot and decay and a waterproof treatment to prevent water ingress.

Pressure Treated buildings - Require a waterproof treatment to prevent water ingress.

Log Cabins/Insulated Garden Rooms - Are supplied untreated and require a preservative and waterproofing treatment.

We also recommend using a silicon sealant on the inside and outside of the windows as soon as possible after assembly and treatment to fully seal the windows.

Roofing felt/covering should be checked annually and replaced or fixed accordingly.

4 General maintenance and wood characteristics

As wood is a natural material it may be affected by the following:

Shrinkage and warping - The timber used in the construction of your garden building will have retained some of its natural moisture content. The moisture content of the timber will vary, depending upon prevailing environmental conditions, which will result in the components either naturally expanding or contracting. As the components dry out, shrinkage may occur. A good waterproofing treatment from the start is the best protection to minimise the effect of moisture loss/intake.

In extended periods of very warm weather getting some moisture to the building will help the overall balance. You can do this by spraying it down lightly with a garden hose. In contrast, after snow fall try to remove the snow as best as possible from the roof to prevent moisture intake and to remove the extra weight.

Top tip - using a garden brush will help you to reach the highest part of the building to remove snow and any debris left from bad weather.

Damp and mould - During the winter months, cold and damp conditions can result in an increased amount of moisture within your garden building, especially when used infrequently. Condensation can form on the timber and other items stored within your garden building. If left this moisture is likely to cause mould and mildew.

To prevent the build-up of moisture, we recommend leaving the door or windows of your building open from time to time, to allow the fresh air to circulate. We also advise against storing wet or damp items in your garden building as this will also increase the level of moisture in the building. If mould or mildew does start to form within your building we recommend using an anti-mould cleaner to remove it and to prevent it spreading, which if left untreated could permanently damage your garden building.

Splits, cracks and knots - You may notice small splits and cracks in some components or holes may appear where knots shrink and fall out. This will not affect the structure of your Garden building however, if you wish to fill them this can be easily done using any good quality wood filler.

Sap - is naturally occurring in wood and may appear in some boards of your garden building. If you wish to remove the sap, we advise waiting until it is dry and then using a sharp knife to carefully remove it. If the removal of the sap causes a hole in the timber, we recommend using a good quality wood filler to fill it.

For more handy hints and tips on how to care and maintain your garden building please refer to the MGP Customer Portal at www.mgplogistics.co.uk



Any further questions?

Contact our Customer Service Team via the MGP Customer Portal at: www.mgplogistics.co.uk

1

Manufacturer’s Warranty

All Mercia Garden Products are supplied with a 1 year warranty on all parts against manufacturing defects.
This warranty does not cover movement, warping or splitting of timber products over time.

This warranty will be voided if any of the following occur:

- 1. The building has been customised or modified/adapted in any way.
- 2. The person claiming is not the original purchaser of the building.
- 3. Any damage has been caused by or as a result of misuse.
- 4. The building has not been maintained and cared for in accordance to our advisories and manufacturer’s recommendations.
- 5. The building has not been treated annually or as per the manufacturer’s recommendations, please ensure receipts are kept to validate this claim.
- 6. The building has not been erected, fitted or installed as per the supplier instructions.
- 7. The building has not been erected on a suitable sized firm flat, solid level concrete/slab base or placed on pressure treated bearers.
- 8. The building is or has been placed with 2 feet (600mm) of any obstructions (walls, trees, plants, fences etc.) which can allow moisture to penetrate the timber.
- 9. The roofing felt has been incorrectly fitted or damaged, allowing water ingress, or has not been properly maintained.
- 10. Any windows and joints have not been sealed, inside and out, with silicone or other watertight sealant.
- 11. Any timber has been cut, pierced or drilled without subsequent application of approved cut-end treatment.

REGISTER FOR YOUR
10 YEAR
ANTI-ROT
GUARANTEE TODAY



2

Anti-rot Guarantee

Mercia Garden Products offer a 10 year anti-rot guarantee on all dip treated (a preparatory treatment) and 15 years on all pressure treated products. This guarantee covers solid timber against rot, decay, blue stain and insect attacks.

To validate the guarantee, the building must be treated (as detailed within manufacturer’s recommendations) within 14 days (weather permitting) of assembly and annually thereafter.

This guarantee does not cover movement, warping or splitting of timber products over time.

This guarantee will be voided if any of the following occur:

- 1. The building has been customised or modified/adapted in any way.
- 2. The person claiming is not the original purchaser of the building.
- 3. Any damage is caused by or as a result of misuse.
- 4. The building has not been maintained and cared for in accordance to our advisories and manufacturer’s recommendations.
- 5. The building has not been treated annually or as per the manufacturer’s recommendations, please ensure receipts are kept to validate this claim.
- 6. The building has not been erected, fitted or installed as per the supplier instructions.
- 7. The building has not been erected on a suitable sized firm flat, solid level concrete/slab base or placed on pressure treated bearers.
- 8. The building is or has been placed with 600mm of any obstructions (walls, trees, plants, fences etc.) which can allow moisture to penetrate the timber.
- 9. The roofing felt has been incorrectly fitted or damaged allowing water ingress, or has not been properly maintained.
- 10. Any windows and joints have not been sealed, inside and out, with silicone or other watertight sealant.
- 11. Any timber has been cut, pierced or drilled without subsequent application of approved cut-end treatment.